Manufactured for Rooms To Go

PNWD

Assembly Instructions
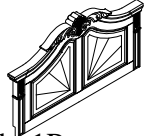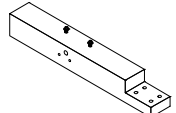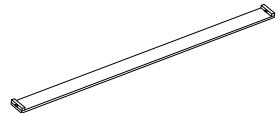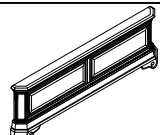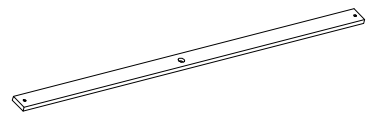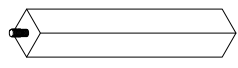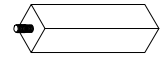
2257-5UH	QN UPH HEADBOARD	SKU# 32322579
2257-5F	QN FOOTBOARD	SKU# 32722577
2257-56R	QN/KG RAILS	SKU# 32922571

Step	Code	Hardware		Q'TY
	A	Allen Key		1Pc
1	B	Bolt 5/16" x 18 x 1 5/8"		10Pcs
		Spring Washer 5/16" dia.		10Pcs
		Flat Washer 5/16" dia.		10Pcs
2	C	Wood Screws #8 x 1 1/4"		8Pcs

Tool Required: Phillips-head screwdriver not provided

PARTS LIST

1. Headboard - 1Pc
2. HB Post - 2Pcs (L=1 R=1)
3. HB Bottom Rail - 1Pc
4. Footboard - 1Pc
5. Side Rail - 2Pcs
6. Slats - 4Pcs
7. Long Support Leg - 4Pcs
8. Short Support Leg - 4Pcs

Option 1:

Option 2:

HARDWARE PACK LOCATION(S):
PNWD

2257-5UH   QN UPH HEADBOARD   SKU# 32322579

PNWD

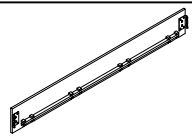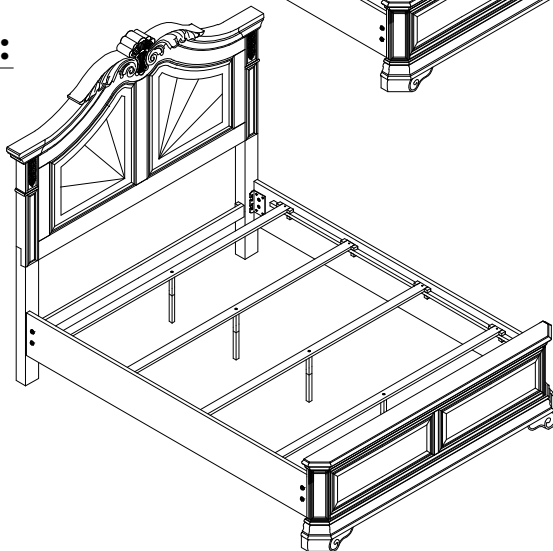# Assembly Instructions

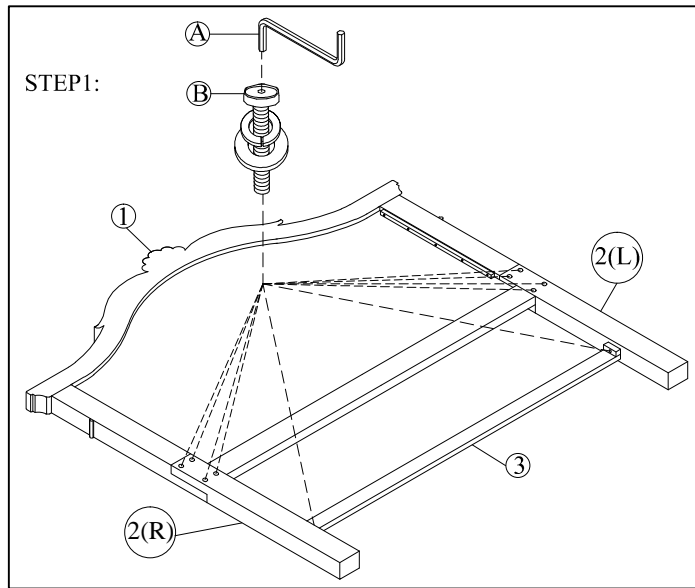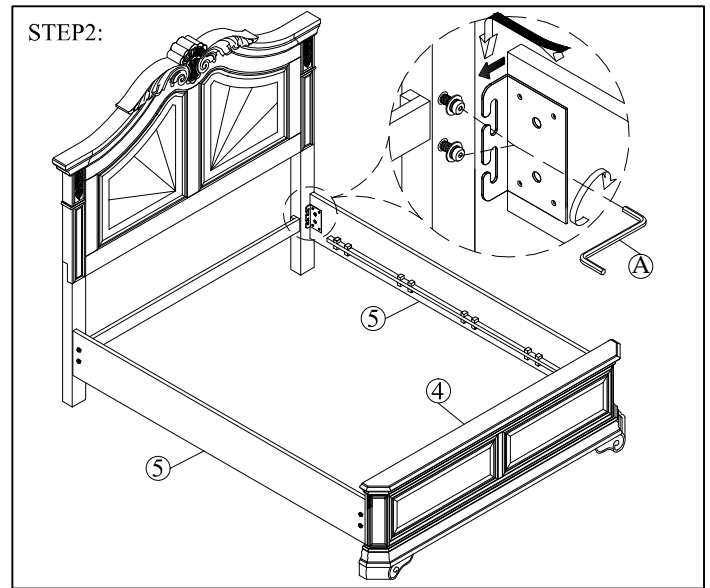|	
2257-5UH QN UPH HEADBOARD	SKU# 32322579
2257-5F QN FOOTBOARD	SKU# 32722577
2257-56R QN/KG RAILS	SKU# 32922571

***Cautions: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly. There are 2 options to assemble this product. Please refer and follow 2 options as below.
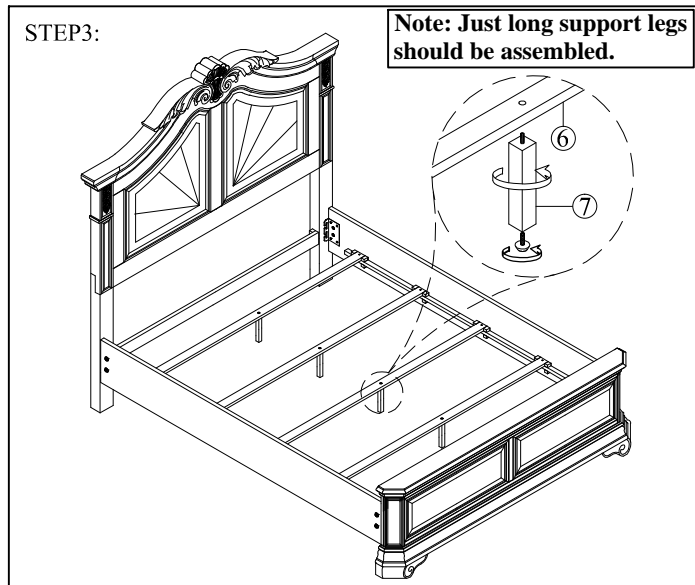
Option 1:
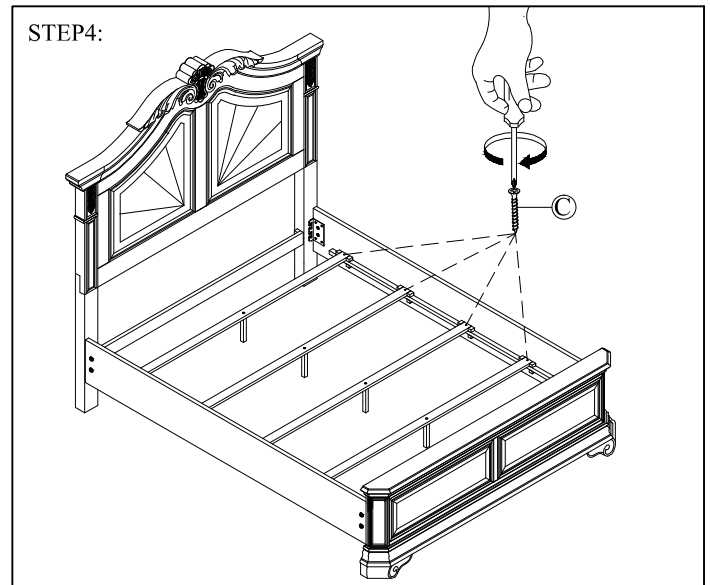## The siderail cleats are at low position.

STEP1:

Attach Headboard post to Headboard panel, Assemble Headboard bottom rail to headboard posts.
Note: Do not tighten all bolts until the HeadBoard is fully assembled.

STEP2:

Remove bolts from headboard and footboard then attach side rails to headboard and footboard with the bolts just take off.

STEP3:

Note: Just long support legs should be assembled.

Attach slats to the side rail cleat

STEP4:

Fasten slats. Assembly completed.

Assembly Instructions

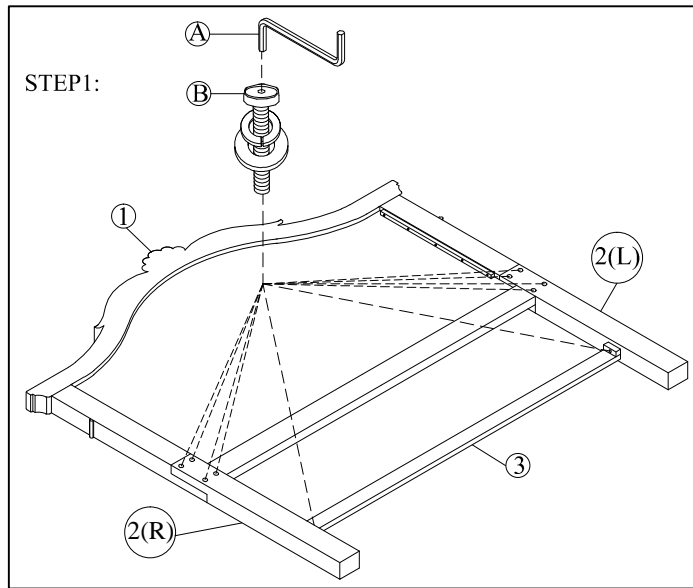|	
2257-5UH QN UPH HEADBOARD	SKU# 32322579
2257-5F QN FOOTBOARD	SKU# 32722577
2257-56R QN/KG RAILS	SKU# 32922571

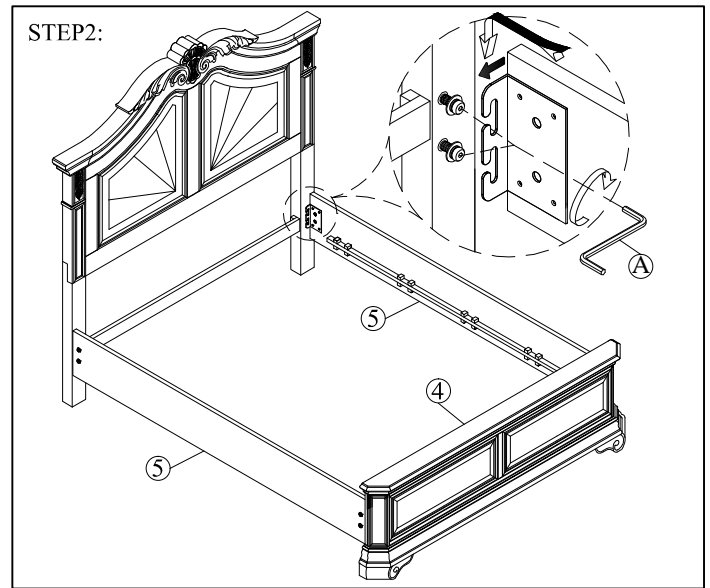***Cautions: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly. There are 2 options to assemble this product. Please refer and follow 2 options as below.
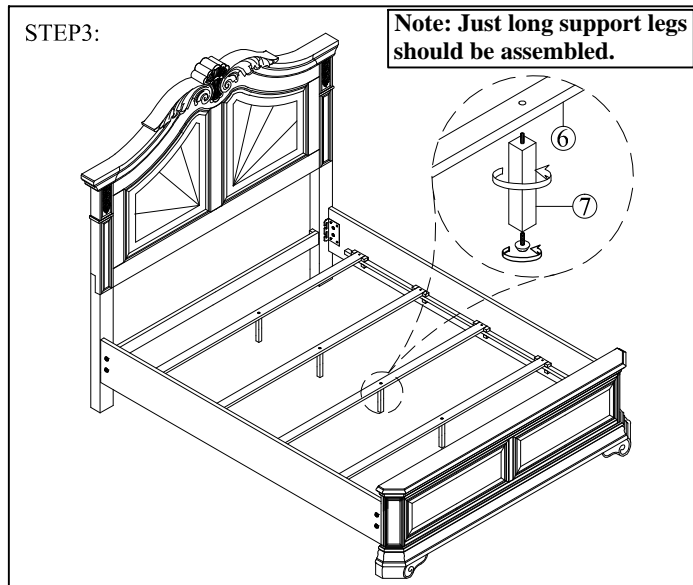
Option 1:
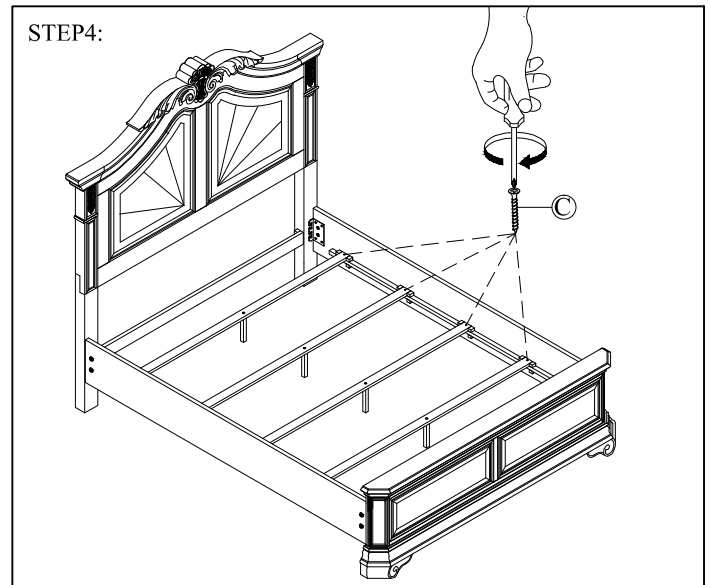## The siderail cleats are at low position.

STEP1:

Attach Headboard post to Headboard panel, Assemble Headboard bottom rail to headboard posts.
Note: Do not tighten all bolts until the HeadBoard is fully assembled.

STEP2:

Remove bolts from headboard and footboard then attach side rails to headboard and footboard with the bolts just take off.

STEP3:

Note: Just long support legs should be assembled.

Attach slats to the side rail cleat

STEP4:

Fasten slats. Assembly completed.