ITEM:	Installing		Accessories			Tool	
	①	②		③	④	⑤	⑥
				SCREW	NUT	GASKET	ALLEN KEY
8304-BS CS	SEAT	FRAME	Size	M6*25	M6	$\Phi_{18*2*}\Phi_8$	Size Φ4
Pcs	1	1		4	4	4	1

Step1

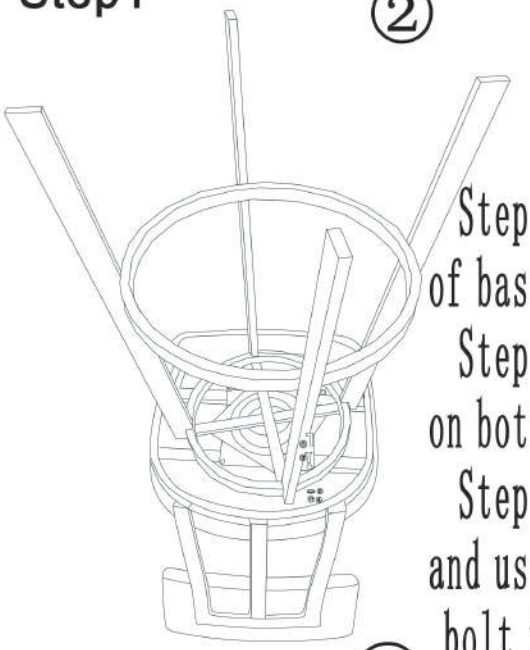

②

①

Step 1: Put the bolts(3) through holes of base and swivel.

Step 2: Put the gasket(5) and nut(4) on bottom of bolt as picture.

Step 3: Keep the nut not moving, and use allen key(6) to afix the bolt into nut until tighten.

Step2