

Instruction for Replacing Control Box for K2111 Air Massage Group



01. Lay down the back cushion, fold the back flap to reveal the zipper



02. Unzip the rear bottom of the back





03. Cut all the zip-ties





05. Disconnect the cord with the red jack



06. B. Loosen flat-head wood screw for the cable holder



06. C. Disconnect the hand wand connector




07. Loosen the black flat-head wood screw




08. Pull out the control box




09. Replace the new control box

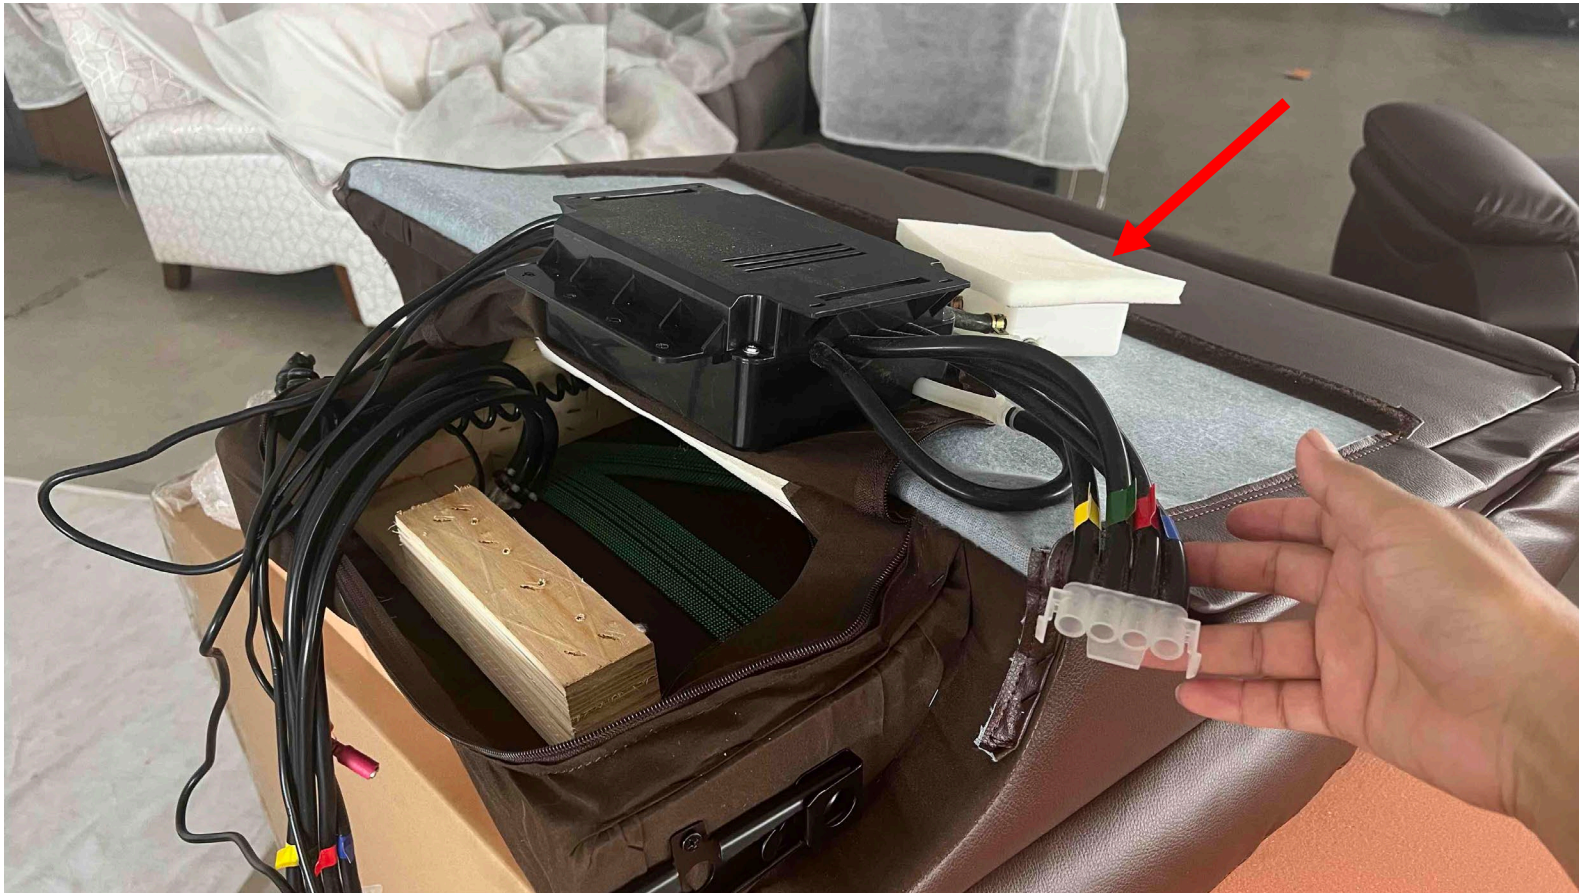

**10. Notice the foam on the white box.
It's 10cm x 10cm x 1cm (4" x 4" x 1/2"). A smaller piece
of foam will also work as long as it covers the box.**

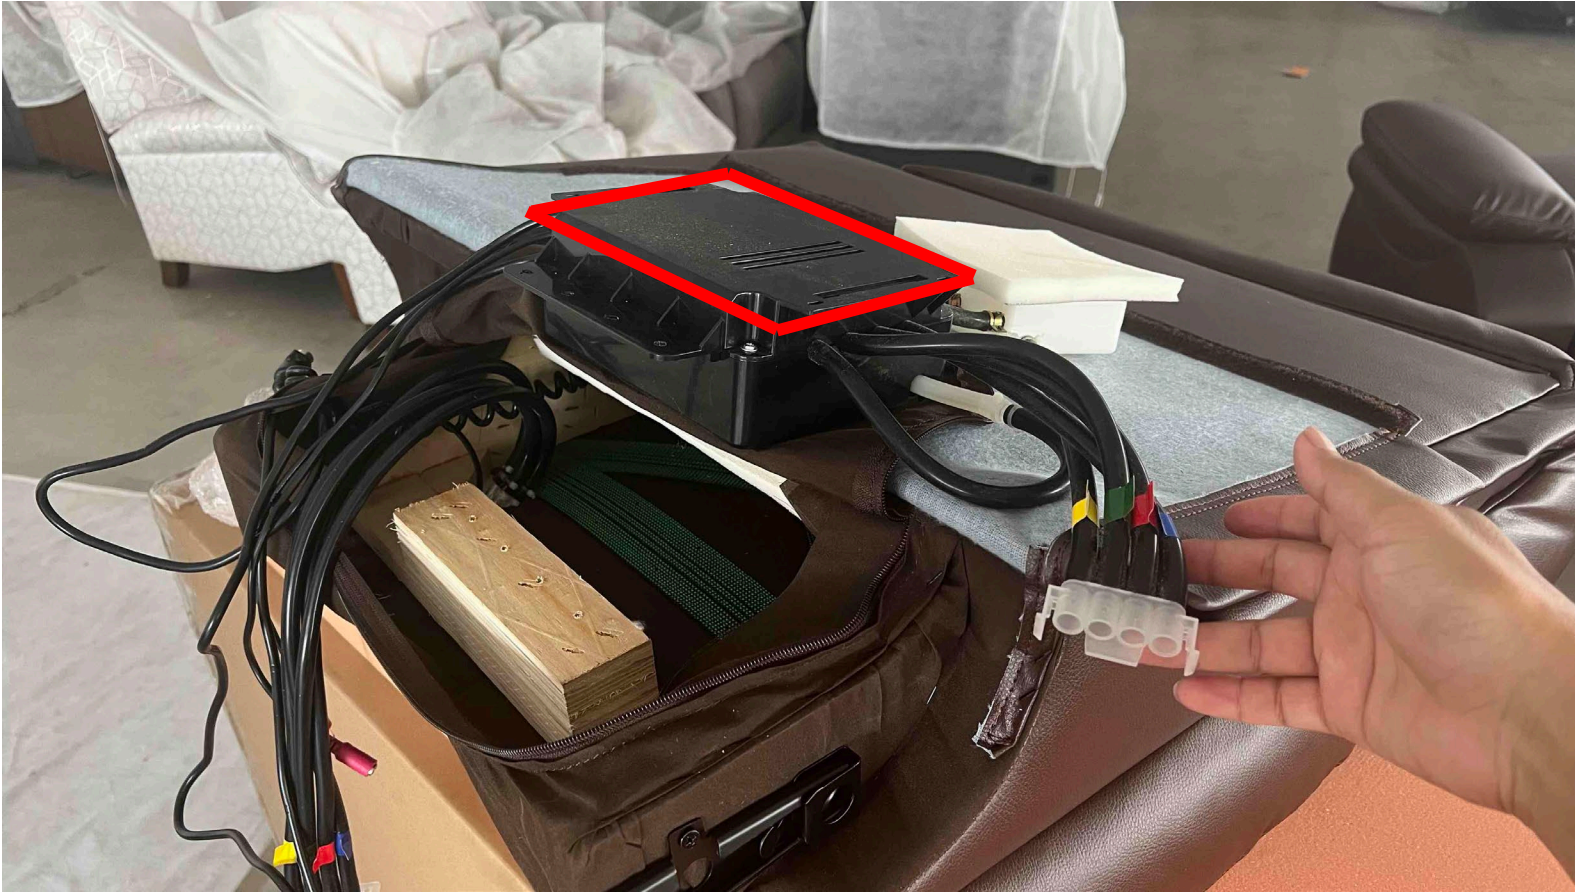

**11. Cut another piece of foam:
15cm x 15cm x 2cm or 6" x 6" x 3/4"**

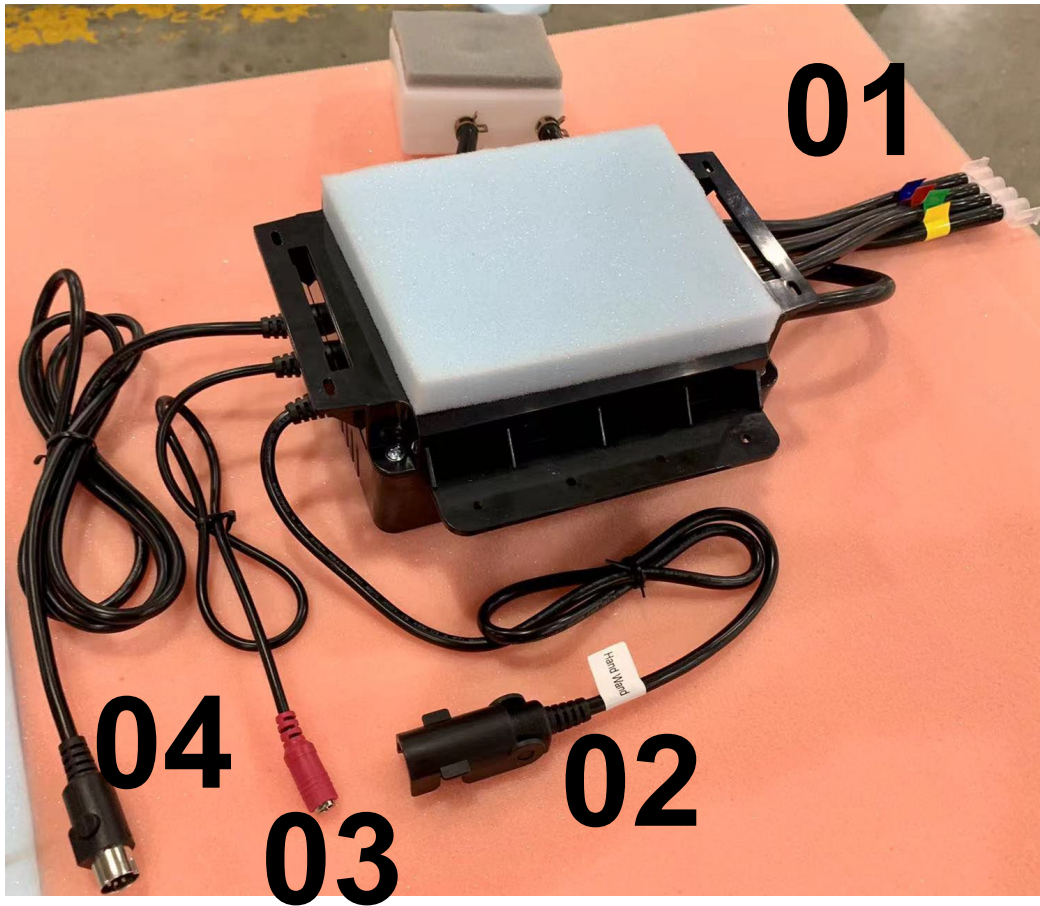

- 01 – air pump connector**
- 02 – hand wand connector**
- 03 – heating pad jack**
- 04 – seat motor connector**


12. Cable identification



13. Insert the new control box into the back



14. Hand wand connector & seat motor connector need to lean outward as shown in the image.

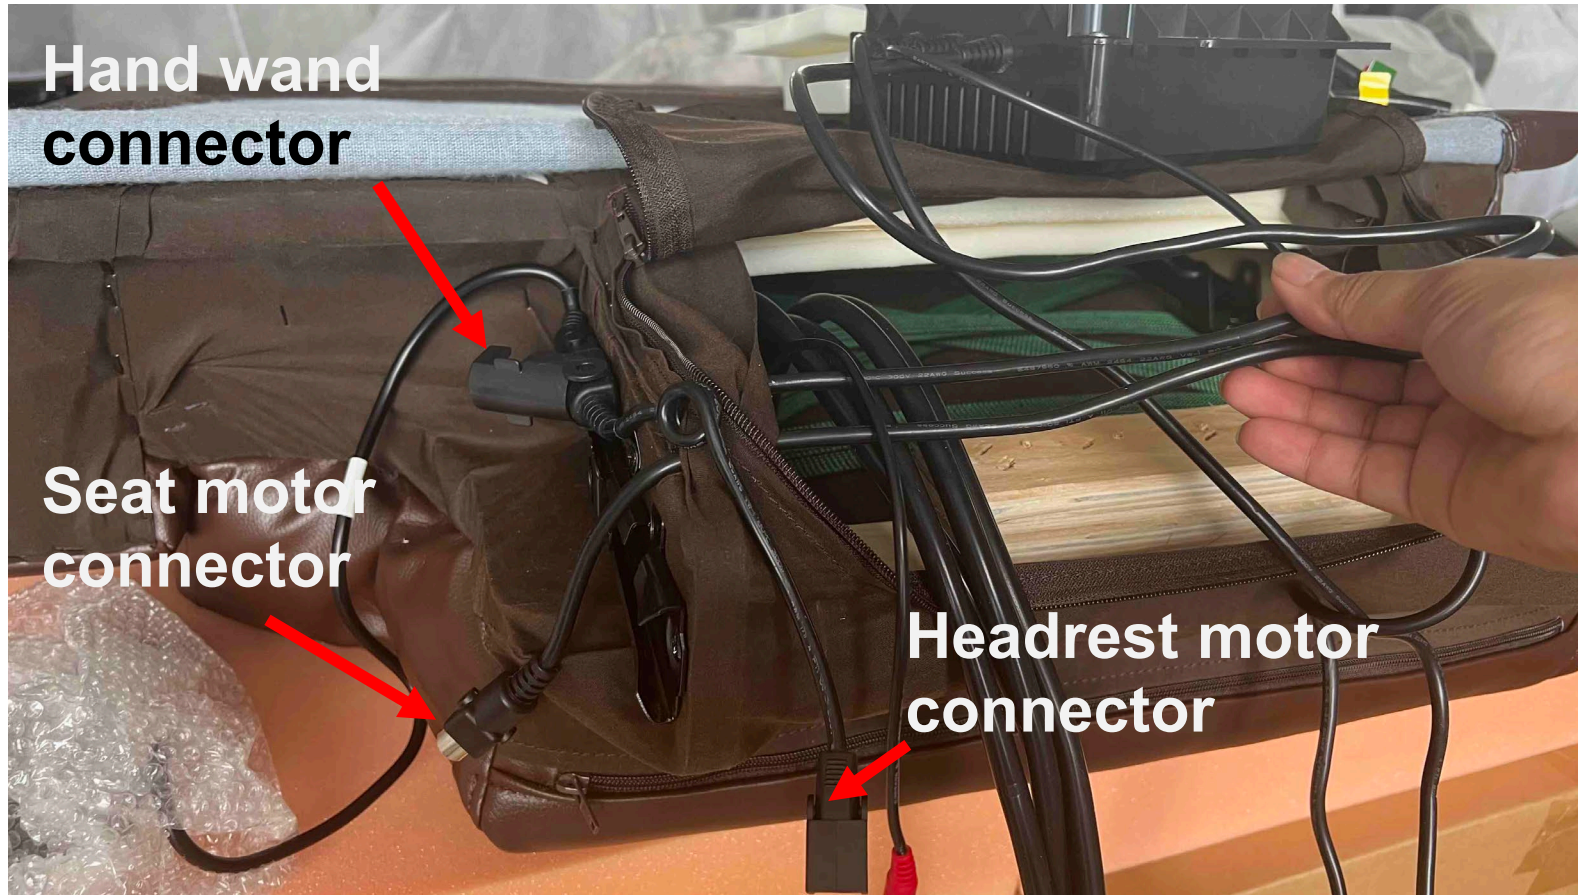

15. The headrest motor connector should lean outwards at all times and stapled as such



16. Use flat head wood screws to mount the control box, then connect the air pump connector and heating pad cord. Make sure the air pump pipes are not bent, then use zip-ties to hold all the cables.

Thanks!